

Standard 800A Mains Distribution Assembly

To meet the demand for shorter and shorter lead times for high current Mains Distribution Assemblies (MDA), we have introduced a Standard 800A MDA which is stocked at our Crayford Customer Service Centre.

In order to maximise the flexibility of the stock assembly, the incoming and outgoing MCCBs incorporate Electronic Trips, which can be simply and easily adjusted on site from 40% to 100% of the nominal rating (In). The general specification of the MDA is detailed below, including the adjustment range of the MCCBs.

Part Number: S140285

Type: B6/ITC/MC800-4P/MC7-RCD/MGPA12

Incoming Terminations

Fitted with heavy duty copper bar terminals to terminate up to 2 no. 240mm² 4C SWA cables

Incoming Switchgear

800A, 4P MCCB

(MCCB adjusts from 800A to 320A)

Distribution Switchgear

2 no. 400A 4P MCCBs each with variable RCD protection (MCCB adjusts from 400A to 160A)

2 no. 250A 4P MCCBs each with variable RCD protection (MCCB adjusts from 250A to 100A)

2 no. 160A 4P MCCBs each with variable RCD protection (MCCB adjusts from 160A to 64A)

1 no. 160A 4P MCCB with variable RCD protection feeding an integral 12 way TP+N MCB pan assembly, which can be fitted with MCBs rated from 1A to 63A; SP, DP or TP; Type "B", "C" or "D".

Please refer to the adjacent box for guidance on the adjusting and setting of Electronic MCCBs. Please note: the MCCB feeding the pan is not Electronic.

Electronic MCCBs also incorporate an LED to indicate the percentage load. When the load is in excess of 90% of the "set" rating, the LED is ON. When the load is in excess of 105% of the "set" rating, the LED flashes.

For more detailed information on the specification of our MDAs please refer to TemPower Data Sheets reference TMPDS8 and TMPDS9 and Technical Data Sheet reference TDS6.

MCCB Adjustment

The overcurrent trip threshold is set via two dials on the front of the MCCB. The product of these two settings (identified as I_o and I_r) multiplied by the nominal rating of the MCCB (I_n) sets the overcurrent trip threshold.

Setting examples

1. What is the overcurrent protection of an MCCB where I_n=630A and the trip unit is set at I_o=0.5 and I_r=0.8?
Answer: I_n x I_o x I_r = 630 x 0.5 x 0.8 = 252A

2. What is the overcurrent protection of an MCCB where I_n=250A and the trip unit is set at I_o=0.9 and I_r=0.8?
Answer: I_n x I_o x I_r = 250 x 0.9 x 0.8 = 180A

MCCBs incorporate a third dial, identified as I_{sd}. This sets the short circuit trip threshold at a multiple of the set overcurrent rating, in a range from 2 to 10 times i.e. I_r = 180A, I_{sd} can be set between 360A and 1800A

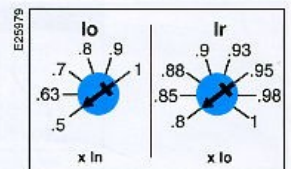


Image of a typical B6 Mains Distribution Assembly

THE POWER PROFESSIONALS

HIGHER POWER TRANS POWER SAFE POWER TEM POWER PRO POWER GREEN POWER

• **SOUTH** 1 Thomas Road, Optima Park, Crayford, Kent DA1 4GA Tel: 0845 074 0084 Fax: 0845 074 0085

• **NORTH** Unit 55, Monckton Road Ind Estate, Wakefield WF2 7AL Tel: 0845 074 0086 Fax: 0845 074 0087

www.blakley.co.uk • sales@blakley.co.uk

THE COMPANY RESERVES THE RIGHT TO CHANGE PRODUCTS WITHOUT PRIOR NOTICE.



Cert. No. 902091

TMPDS21 - 01/08